



RADECAL

MACHINE SALES & SERVICE

Radecal Take-up Roller - User Guide

This is the recommended method of securing and using the Radecal Take-up Device:



Method 1

Firstly, straighten the print job to make sure it comes through to the roller between your Take-up device accurately. Feed the print job through the printer and make sure its securely taped on both sides and in the centre with removeable masking tape. See our online guide at www.youtube.com/radecalNeil for a 3-part guide on the best way to set-up your print job.

It is important to make sure the job is flat if the printer is still moving to avoid mark and blemishes.

To adjust the tension of the Take-up Roller, you must determine the weight of the print job. If you notice the job isn't being collected as normal, stop your printer and consult the instructions that accomapny your Take-up Device.



Radecal Machine Sales & Service
Unit 4, Armstrong Industrial Estate, Washington, Tyne & Wear, NE37 1PR
T. +44 (0) 191 417 2929 F. +44 (0) 191 418 7321 E. info@radecalmachinesales.com